


User manual code learning receivers 1 to 4 channel

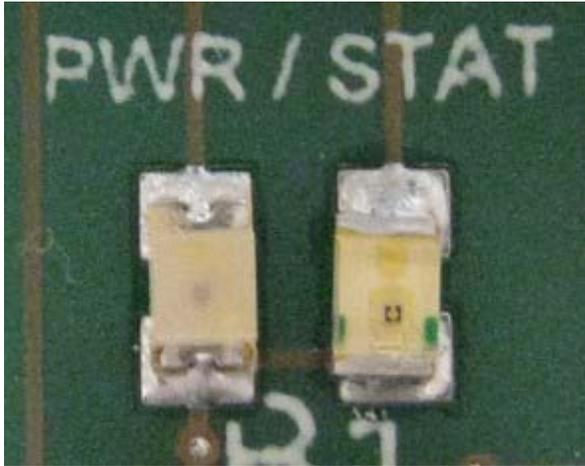

1. GENERAL INFORMATION

The receiver has a red power LED and a yellow status LED.
The power LED is on when the power is connected.
In normal operation, the status LED will flash on a valid receipt code.

2. CLEARING CODES

**From the factory, the receiver is learned with a standard code.
We recommend to erase this code as follows:**

Press one of the switches above the relays.
After about three seconds, the LED above the switch will go on.

ATTENTION!
If this happens, do NOT release the switch.
Wait until ALL LED's turn on.

Once all the LED's are on, you can release the switch.
Any latch functions are reset to pulse.

3. LEARNING THE CODE

Change the factory setting of the 10-pole dipswitch (if present) in the transmitter into a personal code.

Now you can begin to learn the functions of the transmitter into the receiver:

- Push the button of the transmitter being learned and keep it pushed.
This prevents any foreign signals to be learned.

- Then push the switch of the corresponding relay briefly (about 1 second) and upon release, the relay and associated LED will switch on. The code is now learned.
- Repeat the procedure for the rest of the transmitter buttons and relays.

**Spread across all relays, 32 different codes can be learned.
A certain code can only be learned once.**

4. MENU OPTIONS

The receiver has the ability to switch each relay individual as pulse or hold function (latch) Standard all relays will switch as pulse.
To enter the menu, proceed as follows:

Keep a switch pressed.
Release the switch if the corresponding LED turns on.
All LED's will now blink.

CAUTION!
To hold down the switch to long will increase the risk of deleting existing codes!!

When the LED flashes once before goes off, the relay is set as pulse.
When the LED flashes twice before goes off, the relay is set as toggle (latch).
To change the function of a relay, press the corresponding switch briefly (about 1 second)
To save the current settings, push one of the switches until all LED's go out and stop blinking.

CAUTION!
Holding down a switch to long will increase the risk of deleting existing codes!!

The receiver cannot receive any signal in the menu mode. The receiver will exit the menu automatically if no switch is pressed within 10 seconds. Unconfirmed functions are not saved.

Your supplier:



Ter Steeghe Ring 63
3331 LX Zwijndrecht
The Netherlands

Tel. : +31-(0)-786200350
Fax : +31-(0)-786128925
Email : algemeen@detecto.nl
Web : www.detecto.nl